


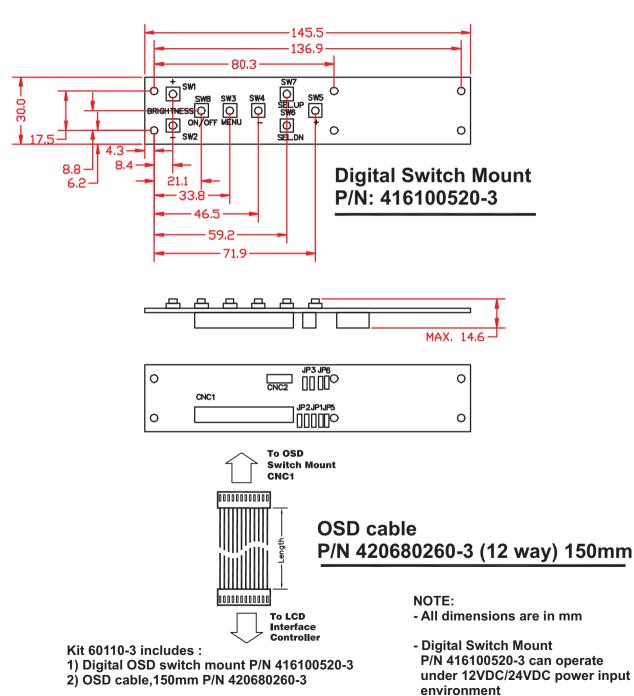

## Kit 60110-3 OSD KIT



CNC1 Pin Assignment Connector :JSTB12B-XH-A	
pin #	description
12	no connection
11	OSD Select UP
10	OSD Select Down
9	OSD Plus/Right
8	OSD Minus/Left
7	OSD Menu
6	Ground
5	Backlight Brightness
	VR pin B
4	Backlight Brightness
	VR pin WIP
3	Backlight Brightness
	-
2	Power Switch B
1	Power Switch A

CNC2 Pin assignment Connector : Hirose DF13—9F	
pin #	description
9	Ground
8	Adjust Down/Decrease/Left
7	Adjust Up/Increase/Right
6	Select Down
5	Select Up
4	Ground
3	No connection
2	No connection
1	Power On/Off

Jumper setting : JP1: SWAP DEC/INC SWITCH 1-2,3-4 closed : NORMAL 1-3,2-4 closed : SWAPPED

JP2 : SWAP SEL UP/DN SWITCH 1-2,3-4 closed : NORMAL 1-3,2-4 closed : SWAPPED

JP3 : SWAP BRIGHTNESS INC/DEC SWITCH 1-2,3-4 closed : NORMAL 1-3,2-4 closed : SWAPPED

- JP5 : 1-2 closed : Disable On/Off power button control Open : Enable On/Off power button control(Default)
- JP6 : 1-2 closed : Default power on (JP5 set open) 3-4 closed: Defalt power off (JP5 set open)