

#### General Description

The MAX3664 evaluation kit (EV kit) simplifies evaluation of the MAX3664 transimpedance preamplifier. The MAX3664 is optimized for hybrid applications that place the preamplifier die in the same package with a photodetector. The EV kit uses a packaged version of the MAX3664 to simplify product evaluation. It allows both optical and electrical testing.

The MAX3664's input voltage is determined by internal circuitry. When the input is connected to a photodiode, the MAX3664's input voltage determines the reverse diode voltage. Electrical signal sources connected to the input must be AC coupled. AC coupling the input removes the signal's DC component. Many of the MAX3664's specifications are affected by the average DC input current, which is normally present when the input signal is derived from a photodiode. A current mirror and simple bias-tee are used to create a signal similar to that of a photodiode.

The MAX3664 EV kit has several mounting holes for inserting common photodiodes, allowing optical testing.

**Features** 

- Single +3.3V Supply
- ♦ Differential Output Drives 100Ω Load
- ◆ 590MHz Bandwidth
- **♦ Electrical or Optical Input**
- Provision for User-Supplied Photodiode
- ♦ Fully Assembled and Tested

## **Ordering Information**

| PART            | TEMP. RANGE    | BOARD TYPE    |
|-----------------|----------------|---------------|
| MAX3664EVKIT-SO | -40°C to +85°C | Surface Mount |

## Component Suppliers

| SUPPLIER                 | PHONE          | FAX            |
|--------------------------|----------------|----------------|
| AVX                      | (803) 946-0690 | (803) 626-3123 |
| Central<br>Semiconductor | (516) 435-1110 | (516) 435-1824 |
| Zetex                    | (516) 543-7100 | (516) 864-7630 |

## Component List

| DESIGNATION | QTY | DESCRIPTION                                       |
|-------------|-----|---------------------------------------------------|
| C1, C9      | 2   | 33μF, 25V tantalum capacitors<br>AVX TAJE336K025R |
| C2, C3, C8  | 3   | 0.01μF, 25V ceramic capacitors                    |
| C4, C5, C6  | 3   | 0.1µF, 25V ceramic capacitors                     |
| C7          | 1   | 390pF, 25V ceramic capacitor                      |
| R1          | 1   | 49.9 <b>Ω</b> , 1% resistor                       |
| R2, R3, R6  | 3   | 200 $\Omega$ , 5% resistors                       |
| R4          | 1   | $2$ k $\Omega$ , 5% resistor                      |
| R5          | 1   | 2kΩ, 1% resistor                                  |
| R7          | 1   | 10kΩ potentiometer                                |
| R8          | 1   | 1kΩ, 5% resistor                                  |
| L1          | 1   | 47μH inductor<br>Panasonic ELJ-FA470KF2           |

| DESIGNATION | QTY | DESCRIPTION                                                  |
|-------------|-----|--------------------------------------------------------------|
| L2, L3      | 2   | 4.7µH inductors<br>Panasonic ELJ-FA4R7KF2                    |
| Q1, Q2      | 2   | PNP small-signal transistors<br>Zetex BCX71KCT               |
| D2          | 1   | High-speed switching diode<br>Central Semiconductor CMPD4448 |
| U1          | 1   | MAX3664ESA                                                   |
| J1, J3, J4  | 3   | SMA connectors (PC edge mount)<br>E.F. Johnson 142-0701-801  |
| JU1, JU2    | 2   | 2-pin headers                                                |
| None        | 2   | Shunts on JU1 and JU2                                        |
| None        | 1   | MAX3664 data sheet                                           |

#### Quick Start

#### **Test Equipment Required**

- Signal-source sine-wave generator or network analyzer with range to 650MHz
- Signal-source function generator with range to 1MHz
- Signal-source pattern generator
- Power supply capable of 3.6V, 35mA output with current limit
- Oscilloscope with at least 1GHz bandwidth
- · Wideband noise meter or RF power meter
- 470MHz filter with linear phase response (example: Mini Circuits SBLP-467 filter)

#### Setup

- 1) Connect a 3.3V power supply to VCC1 and GND.
- 2) Remove the shunts from JU1 and JU2.
- 3) Connect VOUT+ and VOUT- to a dual-channel oscilloscope through terminated  $50\Omega$  cables.
- 4) Apply a 100mVp-p, 311MHz square wave to VIN.
- 5) Observe each output of approximately 150mVp-p on the oscilloscope.

## Detailed Description

### Connections, Adjustments, and Controls VCC1 Connection

This connection provides supply current for the MAX3664. Connect to 3.3V.

#### VCC2 Connection

This connection provides supply current for the current mirror that adds the DC component to the input signal. Connect to 3.3V if used.

#### J1-VIN Connection

A signal generator can be connected here. This input is terminated with  $50\Omega$  to ground and AC coupled to IN (MAX3664) through series resistors (2200 $\Omega$ ). The AC signal input current to the MAX3664 is VIN/2200 $\Omega$ .

#### J3-VOUT-, J4-VOUT+ Connection

These are the MAX3664 outputs. These connectors are AC coupled to the MAX3664, and connect directly to test equipment with  $50\Omega$  or more input impedance.

#### Jumper JU1

This jumper is in series with the current mirror that adds DC component to the input signal. This is a convenient place to measure the DC input current.

#### Jumper JU2

This jumper grounds the MAX3664's COMP pin. The DC cancellation loop is disabled when COMP is grounded.

#### Potentiometer R7

This potentiometer controls the amount of DC current added to the input signal.

#### **Measurement Information**

#### AC Measurement

When making AC measurements, place a shunt on JU1 after setting the DC signal current. Wires attached to this jumper add noise to the signal.

#### DC Measurement

For most DC measurements, place a shunt on JU2 to disable the DC cancellation loop. Measure output offset with JU2 open.

#### Low-Frequency Cutoff Measurement

The low-frequency cutoff changes with average input current (refer to the MAX3664 data sheet, Typical Operating Characteristics). When measuring lowfrequency cutoff, consider the capacitors in the MAX3664's signal path. When driving a  $50\Omega$  load, capacitors C5 and C6 have a lowpass cutoff of approximately 16kHz. Capacitor C4, driving the  $2200\Omega$  input, has a 720Hz lowpass cutoff.

When measuring cutoff frequencies below 50kHz, use a high-impedance oscilloscope to measure the output voltage. With a  $1M\Omega$  input, output capacitors C5 and C6 produce a 1.6Hz cutoff frequency, which is low enough not to interfere with the measurement.

#### Noise Measurement

Remove R5 before attempting noise measurements to minimize input capacitance. With R5 removed the total capacitance at the IN pin is 1.1pF. Refer to the Designing a Low-Capacitance Input section in the MAX3664 data sheet. Connect an output to a wideband noise meter or a sensitive RF power meter to measure input-referred noise. With  $50\Omega$  output load, the MAX3664's single-ended gain is about  $3000\Omega$  (this can be measured more accurately with an AC gain measurement). Use a filter on the output to limit high-frequency noise.

When using an RF power meter, convert the power measurement to input current noise with the following relation:

Input Noise Current = 
$$\frac{\sqrt{\text{Power x } 50}}{\text{Gain}}$$

#### **Photodiode Emulation**

Use the following relations to simulate a photodiode input with a signal generator and the current mirror (Figure 1):

PAVE = average power = (P1 + P0) / 2 (assuming 50% average duty cycle)

 $r_e$  = extinction ratio = P1 / P0

 $P1 = high signal level = 2PAVE (r_e) / (r_e + 1)$ 

P0 = low signal level = 2PAVE / (re + 1)

 $P1-P0 = p-p \text{ signal amplitude} = 2P_{AVE}(r_e - 1) / (r_e + 1)$ 

Input current is related to optical power by the photodiode responsivity  $(\rho)$ , as shown in the following equations:

$$IAVE = PAVE \times \rho$$
or
 $I = P \times \rho$ 

For example, follow these steps to emulate a signal with an average power of -20dBm and an extinction ratio of 10:

- -20dBm optical power will produce 10μA of average input current (assume photodiode responsivity of 1A/W). Install a current meter at JU1. Adjust R7 until current is 10μA.
- 2) The signal amplitude is  $2P_{AVE}(r_e 1) / (r_e + 1) = 16.3\mu A$ . To generate this current through the  $2200\Omega$  input resistors, set the signal source to produce an output level of  $16.3\mu A$  x  $2200\Omega = 36mVp-p$ .

#### Using a Photodiode

- 1) Remove resistor R5 before installing your photodiode in holes provided at location D1.
- Connect the photodiode anode to IN (pin 2) on the MAX3664.
- Connect the photodiode cathode to the junction of C8 and R8.
- Connect the photodiode case ground to INREF1 and INREF2.

#### Supply Current

Supply current, as specified in the MAX3664 data sheet, is the current flowing into VCC1 pad. Current flowing into VCC2 pad powers the current mirror only.

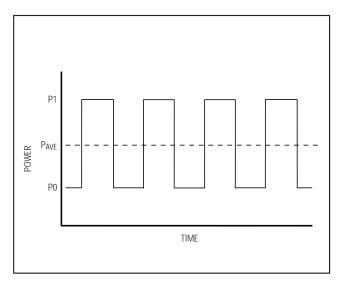


Figure 1. Optical Power Definitions

#### **Layout Considerations**

The EV kit layout has been developed for packaged MAX3664s. The following considerations were taken into account on the evaluation board.

 $50\Omega$  controlled impedance traces are used for the VOUT+ and VOUT- signal paths. Power and ground planes are relieved beneath the MAX3664 IN pin to reduce input capacitance.

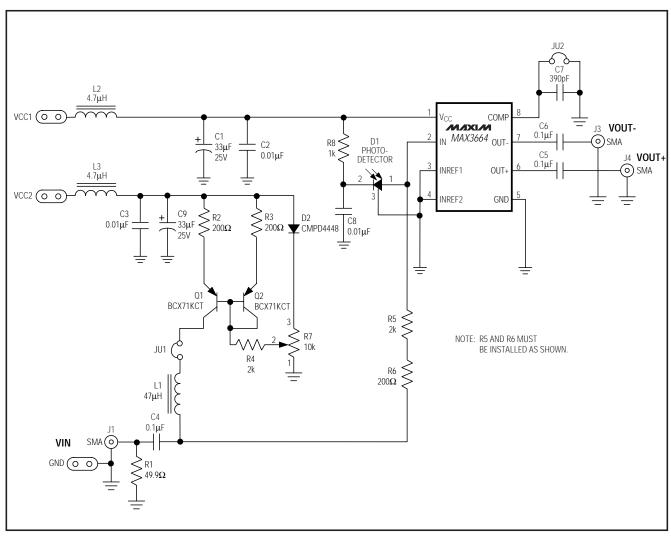


Figure 2. MAX3664 EV Kit Schematic

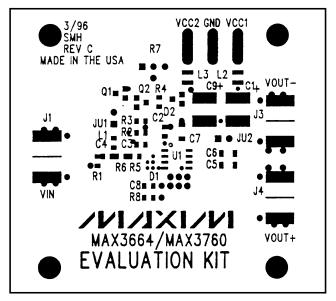


Figure 3. MAX3664 EV Kit Component Placement Guide—Component Side

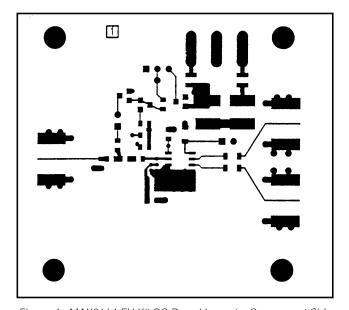


Figure 4. MAX3664 EV Kit PC Board Layout—Component Side

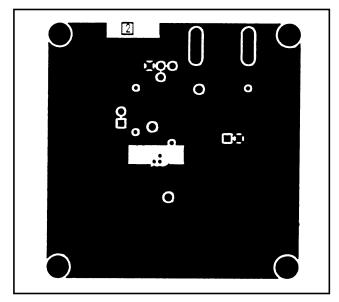


Figure 5. MAX3664 EV Kit PC Board Layout—Ground Plane

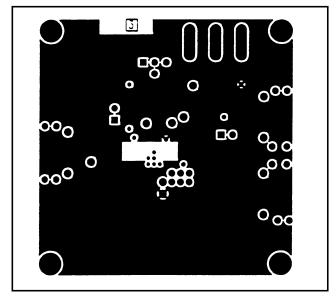


Figure 6. MAX3664 EV Kit PC Board Layout—Power Plane

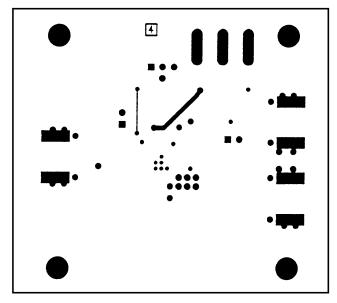


Figure 7. MAX3664 EV Kit PC Board Layout—Solder Side

# Evaluates: MAX3664

# **MAX3664 Evaluation Kit**

**NOTES** 

**WAXIA** 7

**NOTES** 

Maxim cannot assume responsibility for use of any circuitry other than circuitry entirely embodied in a Maxim product. No circuit patent licenses are implied. Maxim reserves the right to change the circuitry and specifications without notice at any time.