



#### WIDEBAND, FET-INPUT OPERATIONAL AMPLIFIER

#### **FEATURES**

Gain Bandwidth Product: 180 MHz

Slew Rate: 100 V/μs

Maximum Input Bias Current: 100 pA
 Input Voltage Noise: 5.4 nV/√Hz
 Maximum Input Offset Voltage: 4 mV

Input Impedance: 10<sup>9</sup> Ω || 10 pF

Power Supply Voltage Range: ±5 to ±15 V

Unity Gain Stable

#### **APPLICATIONS**

Wideband Photodiode Amplifier

High-Speed Transimpedance Gain Stage

Test and Measurement Systems

Current-DAC Output Buffer

Active Filtering

High-Speed Signal Integrator

High-Impedance Buffer

#### DESCRIPTION

The THS4601 is a high-speed, FET-input operational amplifier designed for applications requiring wideband operation, high-input impedance, and high-power supply voltages. By providing a 180-MHz gain-bandwidth product, ±15-V supply operation, and 100-pA input bias current, the THS4601 is capable of wideband transimpedance gain and large output signal swing simultaneously. Low current and voltage noise allow amplification of extremely low-level input signals while still maintaining a large signal-to-noise ratio.

The characteristics of the THS4601 ideally suit it for use as a wideband photodiode amplifier. Photodiode output current is a prime candidate for transimpedance amplification, an application of which is illustrated in Figure 1. Other potential applications include test and measurement systems requiring high-input impedance, digital-to-analog converter output buffering, high-speed integration, and active filtering.

#### A SELECTION OF RELATED OPERATIONAL AMPLIFIER PRODUCTS

DEVICE	V <sub>S</sub> (V)	BW (MHz)	SLEW RATE (V/μs)	VOLTAGE NOISE (nV√Hz)	DESCRIPTION
OPA627	±15	16	55	4.5	Unity-gain stable FET-input amplifier
OPA637	±15	80	135	4.5	Gain of +5 stable FET-input amplifier
OPA655	±5	400	290	6	Unity-gain stable FET-input amplifier


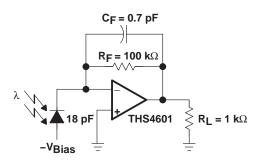


Figure 1. Wideband Photodiode Transimpedance Amplifier






Please be aware that an important notice concerning availability, standard warranty, and use in critical applications of Texas Instruments semiconductor products and disclaimers thereto appears at the end of this data sheet.

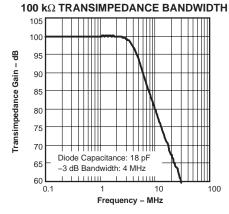

#### THS4601 D AND DDA PACKAGE (TOP VIEW)

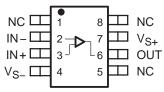

NC - No internal connection

#### **Terminal Functions**

TERM	IINAL	
NAME	NO.	DESCRIPTION
NC	1, 5, 8	These pins have no internal connection.
IN-	2	Inverting input of the amplifier
IN+	3	Noninverting input of the amplifier
V <sub>S-</sub>	4	Negative power supply
OUT	6	Output of the amplifier
V <sub>S+</sub>	7	Positive power supply

#### absolute maximum ratings over operating free-air temperature (unless otherwise noted)†

Supply voltage, V <sub>S+</sub>
Supply voltage, V <sub>S</sub> –16.5 V
Input voltage, V <sub>1</sub> ±V <sub>S</sub>
Output current, IO
Differential input voltage, V <sub>ID</sub> ±4 V
Maximum junction temperature, T <sub>J</sub> 150°C
Operating free-air temperature, T <sub>A</sub> : C-suffix
I-suffix –40°C to 85°C
Storage temperature, T <sub>stq</sub> –65°C to 125°C
Lead temperature 1,6 mm (1/16 inch) from cases for 10 seconds

<sup>†</sup> Stresses beyond those listed under "absolute maximum ratings" may cause permanent damage to the device. These are stress ratings only, and functional operation of the device at these or any other conditions beyond those indicated under "recommended operating conditions" is not implied. Exposure to absolute-maximum-rated conditions for extended periods may affect device reliability.

#### PACKAGE AND ORDERING INFORMATION

PRODUCT	PACKAGE	PACKAGE PACKAGE DESIGNATOR		PACKAGE MARKING
THS4601CD	SOIC surface mount	8D	0°C to 70°C	4601C
THS4601ID	SOIC surface mount	8D	–40°C to 85°C	46011
THS4601CDDA	SOIC surface mount with PowerPAD™	8DDA	0°C to 70°C	4601C
THS4601IDDA	SOIC surface mount with PowerPAD™	8DDA	–40°C to 85°C	4601I

NOTE: The THS4601 is available taped and reeled. Add an R suffix to the device type when ordering (e.g., THS4601IDR).

PowerPAD is a trademark of Texas Instruments.



## electrical specifications: V $_{\mbox{S}}$ = $\pm 15$ V: R $_{\mbox{F}}$ = 250 $\Omega,$ R $_{\mbox{L}}$ = 1 k $\Omega$ and G = +2 (unless otherwise noted)

			THS4601 TYP OVER TEMPERATURE					
PARAMETER		TEST CONDITIONS	TYP	0	VER TEN	IPERATU	RE	
FARAMI	IIEN	TEST CONDITIONS	25°C	25°C	0°C to 70°C	–40°C to 85°C	MIN/ MAX	UNIT
AC PERFORMANCE		•	•	•	•	•		•
		$G = +1, V_O = 20 \text{ mV}_{pp}, R_F = 0 \Omega$	440				Тур	MHz
		$G = +2$ , $V_O = 40 \text{ mV}_{pp}$ , $R_F = 62 \Omega$	95				Тур	MHz
Small-signal bandwidth		$G = +5$ , $V_O = 100 \text{ mV}_{pp}$ , $R_F = 500 \Omega$	36				Тур	MHz
		$G = +10, V_O = 200 \text{ mV}_{pp},$ $R_F = 1 \text{ k}\Omega$	18				Тур	MHz
Gain-bandwidth produ	ıct	G > +10	180				Тур	MHz
Bandwidth for 0.1 dB t	flatness	$G = +2$ , $V_O = 200 \text{ mV}_{pp}$	5				Тур	MHz
Large-signal bandwidt	h	$G = +5$ , $V_O = 10 V_{pp}$	3				Тур	MHz
Slew rate, SR		G = +5, 10 V Step	100				Тур	V/μs
Rise/fall time, t <sub>r</sub> /t <sub>f</sub>		1.0 V Step	7				Тур	ns
	0.01%	G = +5, V <sub>O</sub> = 5 V Step	170				Тур	ns
Settling time, t <sub>S</sub>	0.1%	G = +5, V <sub>O</sub> = 5 V Step	135				Тур	ns
Harmonic distortion	_	$G = +2, f = 1 \text{ MHz}, V_O = 2V_{pp}$						
and		R <sub>L</sub> = 100 Ω	-65				Тур	
2 <sup>nd</sup> Harmonic		R <sub>L</sub> = 1 kΩ	-77				Тур	dBc
ord		R <sub>L</sub> = 100 Ω	-73				Тур	I.D.
3 <sup>rd</sup> Harmonic		$R_L = 1 \text{ k}\Omega$	-96				Тур	dBc
Input voltage noise, V	n	f > 10 kHz	5.4				Тур	nV/√ <del>Hz</del>
Input current noise, In		f > 10 kHz	5.5				Тур	fA/√Hz
Differential gain (NTS)	C, PAL)	$G = +2$ , $R_L = 150 Ω$	0.02%				Тур	
Differential phase (NT	SC, PAL)	$G = +2$ , $R_L = 150 Ω$	0.08				Тур	۰
DC PERFORMANCE			_	_	_	_	_	_
Open-loop voltage gai	n	$G = -10$ , $R_L = 1 \text{ k}\Omega$	105	94	92	90	Min	dB
Input offset voltage, V	IO	V <sub>CM</sub> = 0 V	1.0	4.0	4.5	5.0	Max	mV
Average offset volt	age drift	V <sub>CM</sub> = 0 V			±10	±10	Тур	μV/°C
Input bias current, I <sub>IB</sub>		V <sub>CM</sub> = 0 V	30	100	550	1100	Max	pА
Average bias curre	nt drift	V <sub>CM</sub> = 0 V			50	50	Тур	pA/°C
Input offset current, I <sub>I</sub> (	)	V <sub>CM</sub> = 0 V	2	100	200	300	Max	pА
Average offset current drift		V <sub>CM</sub> = 0 V			5	5	Тур	pA/°C
INPUT		•		-	-			
Common-mode input range, V <sub>IC</sub>			±13.0	12.6 to –12.0	12.5 to –11.9	12.4 to -11.8	Min	V
Common-mode rejecti	on ratio, CMRR		110	100	95	90	Min	dB
Input impedance, Zid	Differential		10 <sup>9</sup>    3.5				Тур	Ω    pF
Input impedance, Zic	Common-mode		10 <sup>9</sup>    6.5				Тур	$\Omega \parallel pF$

## electrical specifications: V<sub>S</sub> = $\pm$ 15 V: R<sub>F</sub> = 250 $\Omega$ , R<sub>L</sub> = 1k $\Omega$ and G = +2 (unless otherwise noted) (continued)

PARAMETER				THS4601						
		TEST CONDITIONS	TYP	OVER TEMPERATURE						
		25°C		25°C	0°C to 70°C	-40°C to 85°C	MIN/ MAX	UNIT		
OUTPUT			•	•	•	•		•		
Voltage output swing		$R_L = 1 \text{ k}\Omega$	12.8 to -13.4	12.4 to -13.1	12.3 to -13.0	12.1 to –12.8	Min	V		
Ourse of subset 1	Sourcing	D 000	-80	-60	-60	-59	Min	4		
Current output, IO	Sinking	$R_L = 20 \Omega$	50	35	35	34	Min	mA		
Closed-loop output impe	dance, Z <sub>O</sub>	G = +1, f = 1 MHz	0.1				Тур	Ω		
POWER SUPPLY										
Specified operating volta	ge		±15	±16.5	±16.5	±16.5	Max	V		
Maximum quiescent curr	ent		10.0	11.5	11.7	12.0	Max	mA		
Minimum quiescent curre	ent		10.0	8.5	8.3	8.0	Min	mA		
	+PSRR		115	90	88	86	Min			
Power supply rejection	-PSRR		115	90	88	86	Min	dB		
TEMPERATURE										
Specified operating range, TA			-40 to 85				Тур	°C		
Thermal resistance, θ <sub>JA</sub>		Junction-to-ambient								
8D: SO-8			170				Тур	°C/W		
8DDA: SO-8 with Powe	rPAD		66.6				Тур	°C/W		

## electrical specifications: V<sub>S</sub> = $\pm 5$ V: R<sub>F</sub> = 250 $\Omega$ , R<sub>L</sub> = 1 k $\Omega$ and G = +2 (unless otherwise noted)

PARAMETER		TEST CONDITIONS			THS				
PARAME	ETER	TEST CONDITIONS	TYP	0	OVER TEMPERATU				
			25°C	25°C	0°C to 70°C	-40°C to 85°C	MIN/ MAX	UNIT	
AC PERFORMANCE									
AC PERFORMANCE		$G = +1, V_O = 20 \text{ mV}_{pp}$	400				Тур	MHz	
One all admirable and addition	L	$G = +2, V_O = 40 \text{ mV}_{pp}$	100				Тур	MHz	
Small-signal bandwidtl	n	$G = +5$ , $V_O = 100 \text{ mV}_{pp}$	50				Тур	MHz	
		$G = +10, V_O = 200 \text{ mV}_{pp}$	18				Тур	MHz	
Gain-bandwidth produ	ct	G > +10	180				Тур	MHz	
Bandwidth for 0.1 dB f	latness	$G = +2, V_O = 200 \text{ mV}_{pp}$	5				Тур	MHz	
Large-signal bandwidt	h	G = +5, V <sub>O</sub> = 5 V <sub>pp</sub>	6				Тур	MHz	
Slew rate, SR		G = +5, 5 V Step	100				Тур	V/µs	
Rise/fall time, t <sub>r</sub> /t <sub>f</sub>		1.0 V Step	8				Тур	ns	
O a till a se than a t	0.01%	G = +5, V <sub>O</sub> = 2 V Step	140				Тур	ns	
Settling time, t <sub>S</sub>	0.1%	G = +5, V <sub>O</sub> = 2 V Step	170				Тур	ns	
Harmonic distortion		$G = +2, f = 1 MHz, V_O = 2V_{pp}$							
and		R <sub>L</sub> = 100 Ω	-74				Тур		
2 <sup>nd</sup> Harmonic		$R_L = 1 \text{ k}\Omega$	-84				Тур	dBc	
- wal		R <sub>L</sub> = 100 Ω	-79				Тур		
3 <sup>rd</sup> Harmonic		$R_L = 1 \text{ k}\Omega$	-94				Тур	dBc	
Input voltage noise, V <sub>r</sub>	<u> </u>	f > 10 kHz	5.4				Тур	nV/√H	
Input current noise, In		f > 10 kHz	5.5				Тур	fA/√H:	
Differential gain (NTSC and PAL)		$G = +2$ , $R_L = 150 Ω$	0.02%				Тур		
Differential phase (NT)	SC and PAL)	$G = +2$ , $R_L = 150 Ω$	0.08				Тур	٥	
DC PERFORMANCE			•						
Open-loop voltage gai	n	$G = -10$ , $R_L = 1 \text{ k}\Omega$	105	94	92	90	Min	dB	
Input offset voltage, V <sub>I</sub>	0	VCM = 0 V	1.0	4.0	4.5	5.0	Max	mV	
Average offset volta	age drift	V <sub>CM</sub> = 0 V			±10	±10	Тур	μV/°C	
Input bias current, I <sub>IB</sub>		V <sub>CM</sub> = 0 V	20	100	550	1100	Max	pA	
Average bias curre	nt drift	V <sub>CM</sub> = 0 V			50	50	Тур	pA/°C	
Input offset current, I <sub>IC</sub>		V <sub>CM</sub> = 0 V	1	100	200	300	Max	рА	
Average offset curr		V <sub>CM</sub> = 0 V			5	5	Тур	pA/°C	
INPUT									
Common-mode input r	range, V <sub>IC</sub>		±2.2	2.7 to -2.0	2.6 to -1.9	2.5 to -1.8	Min	٧	
Common-mode rejecti	on ratio, CMRR		110	100	95	90	Min	dB	
Input impedance, Z <sub>id</sub> Differential			10 <sup>9</sup>    3.5				Тур	Ω    pl	
Input impedance, Z <sub>iC</sub> Common-mode			109    6.5				Тур	Ω    pF	
OUTPUT	•	•	•						
Voltage output swing		$R_L = 1 \text{ k}\Omega$	2.9 to -3.5	2.6 to -3.3	2.5 to -3.2	2.3 to -3.1	Min	٧	
0	Sourcing	D 00 0	-65	-48	-48	-47	Min	<b>T</b> .	
Current output, IO	Sinking	$R_L = 20 \Omega$	45	30	30	29	Min	mA	
Closed-loop output imp	pedance, Z <sub>O</sub>	G = +1, f = 1 MHz	0.1	ĺ			Тур	Ω	



# electrical specifications: $V_S$ = $\pm 5$ V; $R_F$ = 250 $\Omega$ , $R_L$ = 1 k $\Omega$ and G = +2 (unless otherwise noted) (continued)

				THS4601						
PARAMETER		TEST CONDITIONS	TYP	OVER TEMPERATURE						
				25°C	0°C to 70°C	-40°C to 85°C	MIN/ MAX	UNIT		
POWER SUPPLY		•	•		•	•		•		
Specified operating volta	ige		±5	±16.5	±16.5	±16.5	Max	V		
Maximum quiescent curr	ent		9.6	11.2	11.4	11.7	Max	mA		
Minimum quiescent curre	ent		9.6	8.2	8.0	7.7	Min	mA		
	+PSRR		110	90	88	86	Min			
Power supply rejection	-PSRR		110	90	88	86	Min	dB		
TEMPERATURE	_		•	-	-		-	-		
Specified operating rang	e, T <sub>A</sub>		-40 to 85				Тур	°C		
Thermal resistance, θ <sub>JA</sub>		Junction-to-ambient								
8D: SO-8			170				Тур	°C/W		
8DDA: SO-8 with Powe	rPAD		67				Тур	°C/W		

## **Table of Graphs**

	FIGURE
Small-Signal Unity Gain Frequency Response	2
Large-Signal Unity Gain Frequency Response	3
Small-Signal Frequency Response, Gain = +2	4
Small-Signal Frequency Response, Gain = +5	5
Small-Signal Frequency Response, Gain = +10	6
Small-Signal Frequency Response, Gain = +100	7
Open-Loop Gain and Phase vs Frequency	8
Voltage Noise vs Frequency	9
Rejection Ratios vs Frequency	10
Closed-Loop Output Impedance vs Frequency	11
Large-Signal Pulse Response	12
Harmonic Distortion vs Frequency	13
Harmonic Distortion vs Output Voltage Swing	14
Slew Rate vs Output Voltage Step	15
Input Bias Current vs Input Common-Mode Range	16
Common-Mode Rejection Ratio vs Input Common-Mode Range	17
Open-Loop Gain vs Temperature	18
Input Bias Current vs Temperature	19
Input Offset Current vs Temperature	20
Offset Voltage vs Temperature	21
Quiescent Current vs Temperature	22
Output Current vs Temperature	23
Output Voltage Swing vs Temperature	24
Rejection Ratios vs Temperature	25

## measurement conditions: $T_A$ = 25°C, $R_L$ = 1 k $\Omega$ , $V_S$ = ±15 V (unless otherwise noted)



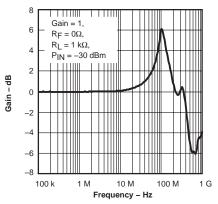


Figure 2

#### **SMALL-SIGNAL FREQUENCY RESPONSE,** GAIN = +2


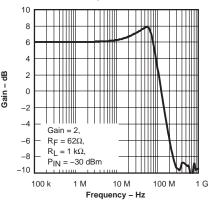


Figure 4

## SMALL-SIGNAL FREQUENCY RESPONSE,

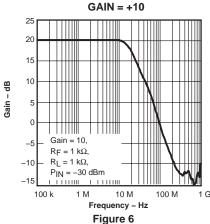

**LARGE-SIGNAL UNITY GAIN** FREQUENCY RESPONSE



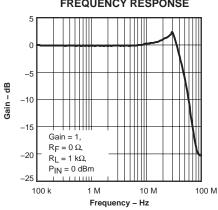


Figure 3

## SMALL-SIGNAL FREQUENCY RESPONSE,

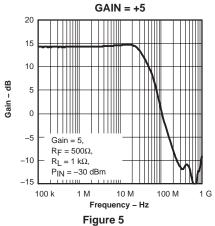

#### SMALL-SIGNAL FREQUENCY RESPONSE, GAIN = +100

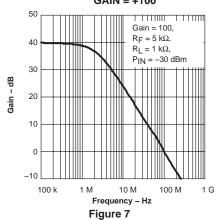



### measurement conditions: $T_A = 25^{\circ}C$ , $R_L = 1 \text{ k}\Omega$ , $V_S = \pm 15 \text{ V}$ (unless otherwise noted)



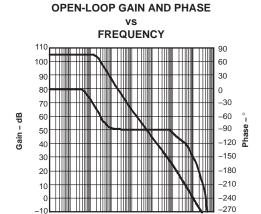


Figure 8

Frequency - Hz

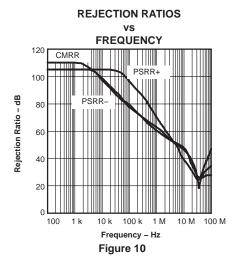

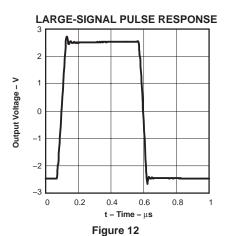

VOLTAGE NOISE

VS

FREQUENCY

60

40

40

10

10


10

1 k 10 k 100 k


Frequency – Hz

Figure 9

#### **CLOSED-LOOP OUTPUT IMPEDANCE**

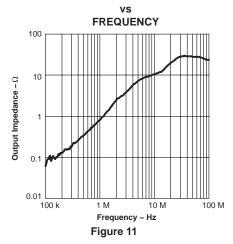



HARMONIC DISTORTION

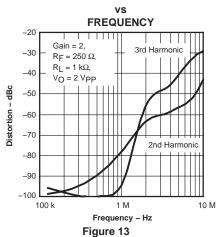





## measurement conditions: $T_A$ = 25°C, $R_L$ = 1 k $\Omega$ , $V_S$ = ±15 V (unless otherwise noted)

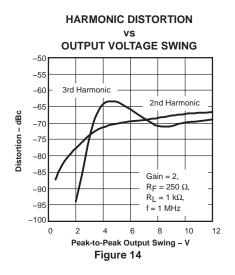


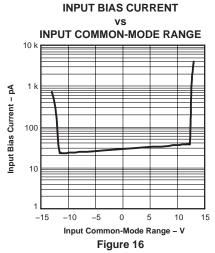

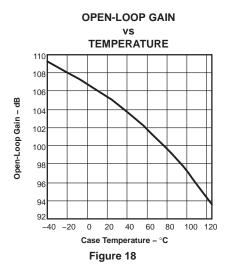


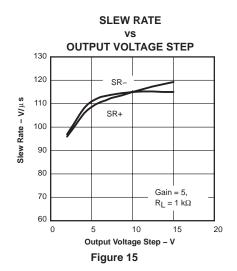

## COMMON-MODE REJECTION RATIO

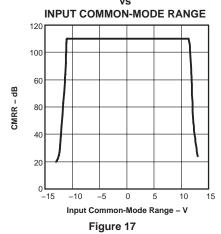


#### **INPUT BIAS CURRENT**

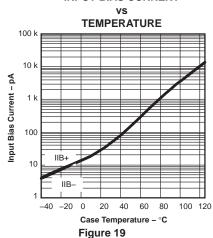



## measurement conditions: T<sub>A</sub> = 25°C, R<sub>L</sub> = 1 k $\Omega$ , V<sub>S</sub> = $\pm$ 15 V (unless otherwise noted)

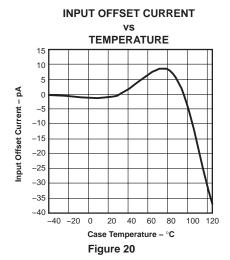

#### QUIESCENT CURRENT

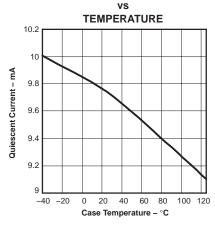


Figure 22

## OUTPUT VOLTAGE SWING vs

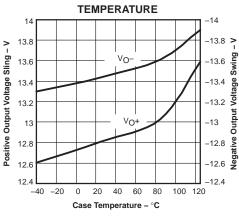


Figure 24



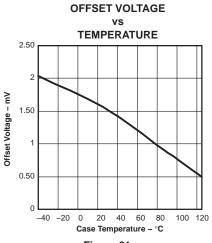


Figure 21

#### **OUTPUT CURRENT**

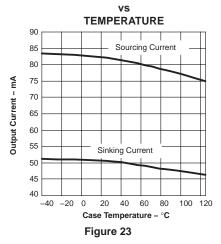

**REJECTION RATIOS** 

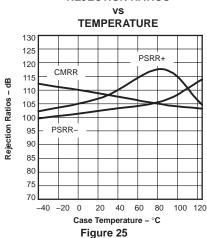



#### introduction

The THS4601 is a high-speed, FET-input operational amplifier. The combination of its high frequency capabilities and its DC precision make it a design option for a wide variety of applications, including test and measurement, optical monitoring, transimpedance gain circuits, and high-impedance buffers. The applications section of the data sheet discusses these particular applications in addition to general information about the device and its features.

#### transimpedance fundamentals

FET-input amplifiers are often used in transimpedance applications because of their extremely high input impedance. A transimpedance block accepts a current as an input and converts this current to a voltage at the output. The high-input impedance associated with FET-input amplifiers minimizes errors in this process caused by the input bias currents, I<sub>IB</sub>, of the amplifier.

#### designing the transimpedance circuit

Typically, design of a transimpedance circuit is driven by the characteristics of the current source that provides the input to the gain block. A photodiode is the most common example of a capacitive current source that would interface with a transimpedance gain block. Continuing with the photodiode example, the system designer traditionally chooses a photodiode based on two opposing criteria: speed and sensitivity. Faster photodiodes cause a need for faster gain stages, and more sensitive photodiodes require higher gains in order to develop appreciable signal levels at the output of the gain stage.

These parameters affect the design of the transimpedance circuit in a few ways. First, the speed of the photodiode signal determines the required bandwidth of the gain circuit. However, the required gain, based on the sensitivity of the photodiode, limits the bandwidth of the circuit. Additionally, the larger capacitance associated with a more sensitive signal source also detracts from the achievable speed of the gain block. The dynamic range of the input signal also places requirements on the amplifier's dynamic range. Knowledge of the source's output current levels, coupled with a desired voltage swing on the output, dictates the value of the feedback resistor,  $R_F$ . The transfer function from input to output is  $V_{OUT} = I_{IN}R_F$ .

The large gain-bandwidth product of the THS4601 provides the capability for achieving both high transimpedance gain and wide bandwidth simultaneously. In addition, the high power supply rails provide the potential for a very wide dynamic range at the output, allowing for the use of input sources which possess wide dynamic range. The combination of these characteristics makes the THS4601 a design option for systems that require transimpedance amplification of wideband, low-level input signals. A standard transimpedance circuit is shown in Figure 26.

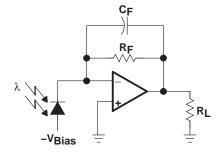


Figure 26. Wideband Photodiode Transimpedance Amplifier



#### designing the transimpedance circuit (continued)

As indicated, the current source typically sets the requirements for gain, speed, and dynamic range of the amplifier. For a given amplifier and source combination, achievable performance is dictated by the following parameters: the amplifier's gain-bandwidth product, the amplifier's input capacitance, the source capacitance, the transimpedance gain, the amplifier's slew rate, and the amplifier's output swing. From this information, the optimal performance of a transimpedance circuit using a given amplifier can be determined. Optimal is defined here as providing the required transimpedance gain with a maximally flat frequency response.

For the circuit shown in Figure 26, all but one of the design parameters is known; the feedback capacitor must be determined. Proper selection of the feedback capacitor prevents an unstable design, controls pulse response characteristics, provides maximally flat transimpedance bandwidth, and limits broadband integrated noise. The maximally flat frequency response results with  $C_F$  calculated as shown in equation 1, where  $C_F$  is the feedback capacitor,  $R_F$  is the feedback resistor,  $C_S$  is the total source capacitance (including amplifier input capacitance and parasitic capacitance at the inverting node), and GBP is the gain-bandwidth product of the amplifier in hertz.

$$C_{F} = \frac{\frac{1}{\pi R_{F}GBP} + \sqrt{\left(\frac{1}{\pi R_{F}GBP}\right)^{2} + \frac{4C_{S}}{\pi R_{F}GBP}}}{2}$$

$$(1)$$

Once the optimal feedback capacitor has been selected, the transimpedance bandwidth can be calculated with equation 2.

$$F_{-3 \text{ dB}} = \sqrt{\frac{GBP}{2\pi R_F \left(C_S + C_F\right)}}$$

$$C_{ICM} = C_{IDIFF} + C_P + C_D$$

$$C_{ICM} = C_{ICM} + C_{IDIFF} + C_P + C_D$$

$$C_{IDIFF} = C_D + C$$

NOTE: The total source capacitance is the sum of several distinct capacitances.

Figure 27. Transimpedance Analysis Circuit



#### designing the transimpedance circuit (continued)

The feedback capacitor provides a pole in the noise gain of the circuit, counteracting the zero in the noise gain caused by the source capacitance. The pole is set such that the noise gain achieves a 20 dB per decade rate-of-closure with the open-loop gain response of the amplifier, resulting in a stable circuit. As indicated, the formula given provides the feedback capacitance for maximally flat bandwidth. Reduction in the value of the feedback capacitor can increase the signal bandwidth, but this occurs at the expense of peaking in the AC response.

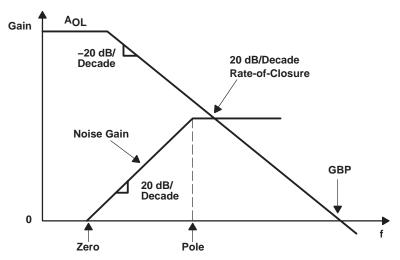


Figure 28. Transimpedance Circuit Bode Plot

The performance of the THS4601 has been measured for a variety of transimpedance gains with a variety of source capacitances. The achievable bandwidths of the various circuit configurations are summarized numerically in the table. The frequency responses are presented in the Figures 27, 28, and 29.

Note that the feedback capacitances do not correspond exactly with the values predicted by the equation. They have been tuned to account for the parasitic capacitance of the feedback resistor (typically 0.2 pF for 0805 surface mount devices) as well as the additional capacitance associated with the PC board. The equation should be used as a starting point for the design, with final values for C<sub>F</sub> optimized in the laboratory.



#### designing the transimpedance circuit (continued)

**Table 1. Transimpedance Performance Summary for Various Configurations** 


SOURCE CAPACITANCE (pF)	TRANSIMPEDANCE GAIN $(\Omega)$	FEEDBACK CAPACITANCE (pF)	-3 dB FREQUENCY (MHz)
18	10k	2.2	10.4
18	100k	0.6	3.3
18	1M	0	1.1
47	10k	3.3	7.6
47	100k	0.6	2.8
47	1M	0	0.88
100	10k	3.9	5.9
100	100k	1.5	1.3
100	1M	0	0.62
220	10k	5.6	3.8
220	100k	1.8	1.1
220	1M	0.4	0.36

## 10 $k\Omega$ TRANSIMPEDANCE BANDWIDTH FOR VARIOUS SOURCE CAPACITANCES


#### 용 85 $C_S = 18 pF, C_F = 2.2 pF$ **Transimpedance Gain** 80 $C_S = 47 pF$ , $C_F = 3.3 pF$ $C_S = 100 pF$ $C_F = 3.9 pF$ 70 1 1 11111111 C<sub>S</sub> = 220 pF, $C_F = 5.6 pF$ 65 10 k 100 M Frequency - Hz

Figure 29

## 100 $k\Omega$ Transimpedance Bandwidth For Various source capacitances

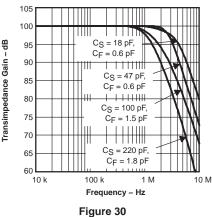


## 1 M $\Omega$ TRANSIMPEDANCE BANDWIDTH FOR VARIOUS SOURCE CAPACITANCES

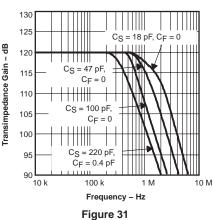

#### measuring transimpedance bandwidth

While there is no substitute for measuring the performance of a particular circuit under the exact conditions that are used in the application, the complete system environment often makes measurements harder. For transimpedance circuits, it is difficult to measure the frequency response with traditional laboratory equipment because the circuit requires a current as an input rather than a voltage. Also, the capacitance of the current source has a direct effect on the frequency response. A simple interface circuit can be used to emulate a capacitive current source with a network analyzer. With this circuit, transimpedance bandwidth measurements are simplified, making amplifier evaluation easier and faster.

#### measuring transimpedance bandwidth (continued)

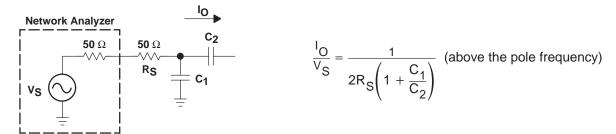

NOTE: This interface network creates a capacitive, constant current source from a network analyzer and properly terminates the network analyzer at high frequencies.

Figure 32. Emulating a Capacitive Current Source With a Network Analyzer

The transconductance transfer function of the interface circuit is

$$\frac{\frac{s}{2R_{S}\left(1 + \frac{C_{1}}{C_{2}}\right)}}{s + \frac{1}{2R_{S}\left(C_{1} + C_{2}\right)}}.$$

This transfer function contains a zero at DC and a pole at  $s = \frac{1}{2R_S(C_1 + C_2)}$ . The transconductance is

constant at  $\frac{1}{2R_S\left(1+\frac{C_1}{C_2}\right)}$ , above the pole frequency, providing a controllable AC current source. This circuit

also properly terminates the network analyzer with 50  $\Omega$  at high frequencies. The second requirement for this current source is to provide the desired output impedance, emulating the output impedance of a photodiode or other current source. The output impedance of this circuit is given by

$$Z_{O}(s) = \frac{C_{1} + C_{2}}{C_{1}C_{2}} \left[ \frac{s + \frac{1}{2R_{s}(C_{1} + C_{2})}}{s(s + \frac{1}{2R_{s}C_{1}})} \right].$$

Assuming  $C_1 >> C_2$ , the equation reduces to  $Z_O \approx \frac{1}{sC_2}$ , giving the appearance of a capacitive source at higher frequency.


Capacitor values should be chosen to satisfy two requirements. First,  $C_2$  should represent the anticipated capacitance of the true source.  $C_1$  should then be chosen such that the corner frequency of the transconductance network is much less than the transimpedance bandwidth of the circuit. Choosing this corner frequency properly leads to more accurate measurements of the transimpedance bandwidth. If the interface circuit's corner frequency is too close to the bandwidth of the circuit, determining the power level in the flatband is difficult. A decade or more of flat bandwidth provides a good basis for determining the proper transimpedance bandwidth.



#### alternative transimpedance configurations

Other transimpedance configurations are possible. Three possibilities are shown below.

The first configuration is a slight modification of the basic transimpedance circuit. By splitting the feedback resistor, the feedback capacitor value becomes more manageable and easier to control. This type of compensation scheme is useful when the feedback capacitor required in the basic configuration becomes so small that the parasitic effects of the board and components begin to dominate the total feedback capacitance. By reducing the resistance across the capacitor, the capacitor value can be increased. This mitigates the dominance of the parasitic effects.

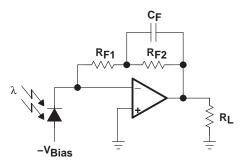

NOTE: Splitting the feedback resistor enables use of a larger, more manageable feedback capacitor.

Figure 33. Alternative Transimpedance Configuration #1

The second configuration uses a resistive T-network to achieve very high transimpedance gains using relatively small resistor values. This topology can be very useful when the desired transimpedance gain exceeds the value of available resistors. The transimpedance gain is given by equation 3.

$$R_{EQ} = R_{F1} \left( 1 + \frac{R_{F2}}{R_{F3}} \right)$$

$$R_{F3} \xrightarrow{C_F} R_{F2}$$

$$R_{F1} \xrightarrow{R_{F2}} R_{F2}$$

$$R_{F1} \xrightarrow{R_{F2}} R_{F2}$$

$$R_{F1} \xrightarrow{R_{F2}} R_{F2}$$

$$R_{F1} \xrightarrow{R_{F2}} R_{F2}$$


NOTE: A resistive T-network enables high transimpedance gain with reasonable resistor values.

Figure 34. Alternative Transimpedance Configuration #2



#### alternative transimpedance configurations (continued)

The third configuration uses a capacitive T-network to achieve fine control of the compensation capacitance. The capacitor  $C_{F3}$  can be used to tune the total effective feedback capacitance to a very fine degree. This circuit behaves the same as the basic transimpedance configuration, with the effective  $C_F$  given by equation 4.

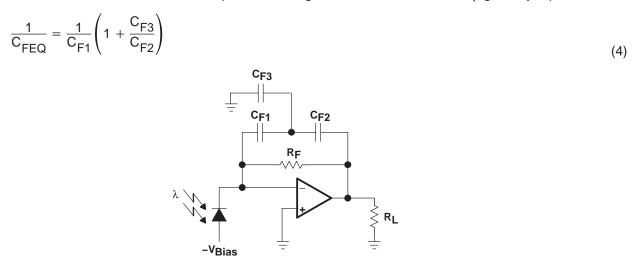

NOTE: A capacitive T-network enables fine control of the effective feedback capacitance using relatively large capacitor values.

Figure 35. Alternative Transimpedance Configuration #3

#### summary of key decisions in transimpedance design

The following is a quick, simplified process for basic transimpedance circuit design. This process gives a quick start to the design process, though it does ignore some aspects that may be critical to the circuit.

- **Step 1:** Determine the capacitance of the source.
- **Step 2:** Calculate the total source capacitance, including the amplifier input capacitance, C<sub>ICM</sub> and C<sub>IDIFF</sub>.
- **Step 3:** Determine the magnitude of the possible current output from the source, including the minimum signal current anticipated and maximum signal current anticipated.
- **Step 4:** Choose a feedback resistor value such that the input current levels create the desired output signal voltages, and ensure that the output voltages can accommodate the dynamic range of the input signal.
- **Step 5:** Calculate the optimum feedback capacitance using equation 1.
- **Step 6:** Calculate the bandwidth given the resulting component values.
- **Step 7:** Evaluate the circuit to see if all design goals are satisfied.



#### selection of feedback resistors

Feedback resistor selection can have a significant effect on the performance of the THS4601 in a given application, especially in configurations with low closed-loop gain. If the amplifier is configured for unity gain, the output should be directly connected to the inverting input. Any resistance between these two points interacts with the input capacitance of the amplifier and causes an additional pole in the frequency response. For non-unity gain configurations, low resistances are desirable for flat frequency response. However, care must be taken not to load the amplifier too heavily with the feedback network if large output signals are expected. In most cases, a tradeoff will be made between the frequency response characteristics and the loading of the amplifier. For a gain of 2, a 250  $\Omega$  feedback resistor is a suitable operating point from both perspectives.

If resistor values are chosen too large, the THS4601 is subject to oscillation problems. For example, an inverting amplifier configuration with a 1-k $\Omega$  gain resistor and a 1-k $\Omega$  feedback resistor develops an oscillation due to the interaction of the large resistors with the input capacitance. In low gain configurations, avoid feedback resistors this large or anticipate using an external compensation scheme to stabilize the circuit.

#### overdrive recovery


The THS4601 has an overdrive recovery period when the output is driven close to one power supply rail or the other. The overdrive recovery time period is dependent upon the magnitude of the overdrive and whether the output is driven towards the positive or the negative power supply. The four graphs shown here depict the overdrive recovery time in two cases, an attempted 28 V<sub>PP</sub> signal on the output and an attempted 30 V<sub>PP</sub> signal on the output. Note that in both of these cases, the output does not achieve these levels as the output voltage swing is limited to less than these values, but these values are representative of the desired signal swing on the output for the given inputs. As shown in the figures, the recovery period increases as the magnitude of the overdrive increases, with the worst case recovery occurring with the negative rail. The recovery times are summarized in Table 2.


**Table 2. Overdrive Recovery Characteristics** 

VOLTAGE RAIL	IDEAL OUTPUT SWING (V <sub>PP</sub> )	OVERDRIVE RECOVERY TIME (ns)
+V <sub>S</sub>	28	320
-V <sub>S</sub>	28	340
+Vs	30	540
-V <sub>S</sub>	30	680



#### overdrive recovery (continued)

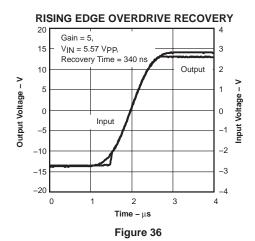

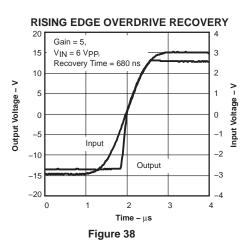


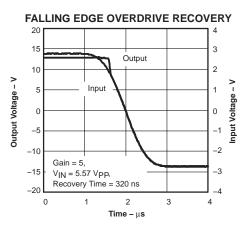


Figure 37

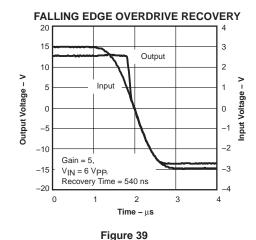

#### high frequency continuous wave amplification

When presented with high frequency sinusoids in low-gain configurations (G < 5), the THS4601 experiences a relatively large differential input voltage between the two input terminals of the amplifier. As this differential input voltage increases, the internal slew-boosting circuitry can cause some transistors in the signal path to enter the cutoff region of operation. As the derivative of the signal changes signs, these transistors suffer from a short recovery time period, generating appreciable levels of distortion. This behavior is depicted in the graph Harmonic Distortion vs Frequency. At 2 MHz with a 2  $V_{PP}$  output signal, the distortion rises significantly. For most high-gain configurations including transimpedance applications, this phenomena is not problematic.

#### slew rate performance with varying input step amplitude and rise/fall time

Some FET input amplifiers exhibit the peculiar behavior of having a larger slew rate when presented with smaller input voltage steps and slower edge rates due to a change in bias conditions in the input stage of the amplifier under these circumstances. This phenomena is most commonly seen when FET input amplifiers are used as voltage followers. As this behavior is typically undesirable, the THS4601 has been designed to avoid these issues. Larger amplitudes lead to higher slew rates, as would be anticipated, and fast edges do not degrade the slew rate of the device.



#### power dissipation and thermal characteristics

The THS4601 does not incorporate automatic thermal shutoff protection, so the designer must take care to ensure that the design does not violate the absolute maximum junction temperature of the device. Failure may result if the absolute maximum junction temperature of 150°C is exceeded.

The thermal characteristics of the device are dictated by the package and the PC board. Maximum power dissipation for a given package can be calculated using the following formula.

$$P_{Dmax} = \frac{T_{max} - T_{A}}{\theta_{JA}}$$

Where:


P<sub>Dmax</sub> is the maximum power dissipation (W)

T<sub>max</sub> is the absolute maximum junction temperature (°C)

T<sub>A</sub> is the ambient temperature (°C)

θ<sub>JA</sub> is the thermal coefficient from the silicon junctions to the ambient air (°C/W)

For systems where heat dissipation is more critical, the THS4601 is offered in an 8-pin SOIC with PowerPAD. The thermal coefficient for the SOIC PowerPAD is substantially improved over the traditional SOIC. Maximum power dissipation levels are depicted in the graph for the two packages. The data for the 8DDA package assumes a board layout that follows the PowerPAD layout guidelines.

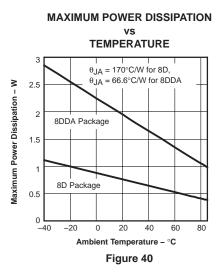

When determining whether or not the device satisfies the maximum power dissipation requirement, it is important to not only consider quiescent power dissipation, but also dynamic power dissipation. Often times, this is difficult to quantify because the signal pattern is inconsistent, but an estimate of the RMS power dissipation can provide visibility into a possible problem.

#### PC board layout guidelines

Achieving optimum performance with a high frequency amplifier requires careful attention to board layout parasitics and external component selection. Recommendations that optimize performance include the following.

- Use of a ground plane—It is highly recommended that a ground plane be used on the board to provide all
  components with a low impedance connection to ground. However, the ground plane should be cleared
  around the amplifier inputs and outputs to minimize parasitic capacitance. A solid ground plane is
  recommended wherever possible.
- Proper power supply decoupling—A 6.8 μF tantalum capacitor and a 0.1 μF ceramic capacitor should be used on each power supply node. Good performance is possible if the 6.8 μF capacitor is shared among several amplifiers, but each amplifier should have a dedicated 0.1 μF capacitor for each supply. The 0.1 μF capacitor should be placed as close to the power supply pins as possible. As the distance from the device increases, the trace inductance rises and decreases the effectiveness of the capacitor. A good design has less than 2.5 mm separating the ceramic capacitor and the power supply pin. The tantalum capacitors can be placed significantly further away from the device.
- Avoid sockets—Sockets are not recommended for high-speed amplifiers. The lead inductance associated
  with the socket pins often leads to stability problems. Direct soldering to a printed-circuit board yields the
  best performance.
- Minimize trace length and place parts compactly—Shorter traces minimize stray parasitic elements of the design and lead to better high-frequency performance.
- Use of surface mount passive components—Surface mount passive components are recommended due
  to the extremely low lead inductance and the small component footprint. These characteristics minimize
  problems with stray series inductance and allow for a more compact circuit layout. Compact layout reduces
  both parasitic inductance and capacitance in the design.
- Minimize parasitic capacitance on the signal input and output pins—Parasitic capacitance on the input and output pins can degrade high frequency behavior or cause instability in the circuit. Capacitance on the inverting input or the output is a common cause of instability in high performance amplifiers, and capacitance on the noninverting input can react with the source impedance to cause unintentional band-limiting. To reduce unwanted capacitance around these pins, a window should be opened up in the signal/power layers that are underneath those pins. Power and ground planes should otherwise be unbroken.

#### PowerPAD design considerations


The THS4601 is available in a thermally-enhanced PowerPAD package. This package is constructed using a downset leadframe upon which the die is mounted (see Figure 39). This arrangement results in the lead frame exposed as a thermal pad on the underside of the package. Because this thermal pad has direct thermal contact with the die, excellent thermal performance can be achieved by providing a good thermal path away from the thermal pad.

The PowerPAD package allows for both assembly and thermal management in one manufacturing operation. During the surface-mount solder operation (when the leads are being soldered), the thermal pad can also be soldered to a copper area underneath the package. Through the use of thermal paths within this copper area, heat can be conducted away from the package into either a ground plane or other heat dissipating device. The PowerPAD is electrically insulated from the amplifier circuitry, but connection to the ground plane is recommended due to the high thermal mass typically associated with a ground plane.

The PowerPAD package represents a breakthrough in combining the small area and ease of assembly of surface mount with the, heretofore, awkward mechanical methods of heatsinking.



#### PowerPAD design considerations (continued)

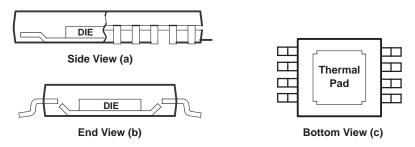

NOTE A: The thermal pad is electrically isolated from all terminals in the package.

Figure 41. Views of Thermally Enhanced Package

Although there are many ways to properly heatsink the PowerPAD package, the following steps illustrate the recommended approach.

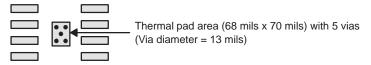


Figure 42. PowerPAD PCB Etch and Via Pattern

#### PowerPAD PCB LAYOUT CONSIDERATIONS

- 1. Prepare the PCB with a top side etch pattern as shown in Figure 42. There should be etch for the leads as well as etch for the thermal pad.
- 2. Place five vias in the area of the thermal pad. These holes should be 13 mils in diameter. Keep them small so that solder wicking through the holes does not occur during reflow.
- 3. Additional vias may be placed anywhere along the thermal plane outside of the thermal pad area. This helps dissipate the heat generated by the IC. These additional vias may be larger than the 13-mil diameter vias directly under the thermal pad. Larger vias are permissible here because they are not susceptible to solder wicking as the vias underneath the device.
- 4. Connect all vias to the internal ground plane for best thermal characteristics
- 5. When connecting these holes to the ground plane, do not use the typical web or spoke via connection methodology. Web connections have a high thermal resistance connection that is useful for slowing the heat transfer during soldering operations. This makes the soldering of vias that have plane connections easier. In this application, however, low thermal resistance is desired for the most efficient heat transfer. Therefore, the holes under the PowerPAD package should make their connection to the internal ground plane with a complete connection around the entire circumference of the plated-through hole.
- 6. The top-side solder mask should leave the terminals of the package and the thermal pad area with its five holes exposed. The bottom-side solder mask should cover the five holes of the thermal pad area. This prevents solder from being pulled away from the thermal pad area during the reflow process.
- 7. Apply solder paste to the exposed thermal pad area and all of the IC terminals.
- 8. With these preparatory steps in place, the IC is simply placed in position and run through the solder reflow operation as any standard surface-mount component. This results in a part that is properly installed.



#### evaluation module and applications support

An evaluation board is available for quick laboratory verification of performance. An evaluation module can be ordered from Texas Instruments' web site (www.ti.com) or from your local TI sales representative. Applications support is also available for designers. The Product Information Center (PIC) can put designers in touch with applications engineers at Texas Instruments. The PIC be contacted via the web site as well.

#### additional reference material

- PowerPAD Made Easy, application brief, Texas Instruments Literature Number SLMA004.
- PowerPAD Thermally Enhanced Package, technical brief, Texas Instruments Literature Number SLMA002.
- Noise Analysis of FET Transimpedance Amplifiers, application bulletin, Texas Instruments Literature Number SBOA060.
- Tame Photodiodes With Op Amp Bootstrap, application bulletin, Texas Instruments Literature Number SBBA002.
- Designing Photodiode Amplifier Circuits With OPA128, application bulletin, Texas Instruments Literature Number SBOA061.
- Photodiode Monitoring With Op Amps, application bulletin, Texas Instruments Literature Number SBOA035.
- Comparison of Noise Performance Between a FET Transimpedance Amplifier and a Switched Integrator, Application Bulletin, Texas Instruments Literature Number SBOA034.







20-Aug-2011

#### **PACKAGING INFORMATION**

Orderable Device	Status <sup>(1)</sup>	Package Type	Package Drawing	Pins	Package Qty	Eco Plan <sup>(2)</sup>	Lead/ Ball Finish	MSL Peak Temp <sup>(3)</sup>	Samples (Requires Login)
THS4601CD	ACTIVE	SOIC	D	8	75	Green (RoHS & no Sb/Br)	CU NIPDAU	Level-1-260C-UNLIM	
THS4601CDG4	ACTIVE	SOIC	D	8	75	Green (RoHS & no Sb/Br)	CU NIPDAU	Level-1-260C-UNLIM	
THS4601ID	ACTIVE	SOIC	D	8	75	Green (RoHS & no Sb/Br)	CU NIPDAU	Level-1-260C-UNLIM	
THS4601IDDA	ACTIVE	SO PowerPAD	DDA	8	75	Green (RoHS & no Sb/Br)	CU SN	Level-1-260C-UNLIM	
THS4601IDDAG3	ACTIVE	SO PowerPAD	DDA	8	75	Green (RoHS & no Sb/Br)	CU SN	Level-1-260C-UNLIM	
THS4601IDDAR	ACTIVE	SO PowerPAD	DDA	8	2500	Green (RoHS & no Sb/Br)	CU SN	Level-1-260C-UNLIM	
THS4601IDDARG3	ACTIVE	SO PowerPAD	DDA	8	2500	Green (RoHS & no Sb/Br)	CU SN	Level-1-260C-UNLIM	
THS4601IDG4	ACTIVE	SOIC	D	8	75	Green (RoHS & no Sb/Br)	CU NIPDAU	Level-1-260C-UNLIM	

<sup>(1)</sup> The marketing status values are defined as follows:

ACTIVE: Product device recommended for new designs.

LIFEBUY: TI has announced that the device will be discontinued, and a lifetime-buy period is in effect.

NRND: Not recommended for new designs. Device is in production to support existing customers, but TI does not recommend using this part in a new design.

PREVIEW: Device has been announced but is not in production. Samples may or may not be available.

**OBSOLETE:** TI has discontinued the production of the device.

(2) Eco Plan - The planned eco-friendly classification: Pb-Free (RoHS), Pb-Free (RoHS Exempt), or Green (RoHS & no Sb/Br) - please check http://www.ti.com/productcontent for the latest availability information and additional product content details.

TBD: The Pb-Free/Green conversion plan has not been defined.

**Pb-Free (RoHS):** TI's terms "Lead-Free" or "Pb-Free" mean semiconductor products that are compatible with the current RoHS requirements for all 6 substances, including the requirement that lead not exceed 0.1% by weight in homogeneous materials. Where designed to be soldered at high temperatures, TI Pb-Free products are suitable for use in specified lead-free processes.

**Pb-Free (RoHS Exempt):** This component has a RoHS exemption for either 1) lead-based flip-chip solder bumps used between the die and package, or 2) lead-based die adhesive used between the die and leadframe. The component is otherwise considered Pb-Free (RoHS compatible) as defined above.

Green (RoHS & no Sb/Br): TI defines "Green" to mean Pb-Free (RoHS compatible), and free of Bromine (Br) and Antimony (Sb) based flame retardants (Br or Sb do not exceed 0.1% by weight in homogeneous material)

<sup>(3)</sup> MSL, Peak Temp. -- The Moisture Sensitivity Level rating according to the JEDEC industry standard classifications, and peak solder temperature.



#### **PACKAGE OPTION ADDENDUM**

20-Aug-2011

**Important Information and Disclaimer:** The information provided on this page represents TI's knowledge and belief as of the date that it is provided. TI bases its knowledge and belief on information provided by third parties, and makes no representation or warranty as to the accuracy of such information. Efforts are underway to better integrate information from third parties. TI has taken and continues to take reasonable steps to provide representative and accurate information but may not have conducted destructive testing or chemical analysis on incoming materials and chemicals. TI and TI suppliers consider certain information to be proprietary, and thus CAS numbers and other limited information may not be available for release.

In no event shall TI's liability arising out of such information exceed the total purchase price of the TI part(s) at issue in this document sold by TI to Customer on an annual basis.

PACKAGE MATERIALS INFORMATION

www.ti.com 29-Jul-2009

#### TAPE AND REEL INFORMATION





	Dimension designed to accommodate the component width
B0	Dimension designed to accommodate the component length
K0	Dimension designed to accommodate the component thickness
W	Overall width of the carrier tape
P1	Pitch between successive cavity centers

QUADRANT ASSIGNMENTS FOR PIN 1 ORIENTATION IN TAPE



#### \*All dimensions are nominal

Device	Package Type	Package Drawing		SPQ	Reel Diameter (mm)	Reel Width W1 (mm)	A0 (mm)	B0 (mm)	K0 (mm)	P1 (mm)	W (mm)	Pin1 Quadrant
THS4601IDDAR	SO Power PAD	DDA	8	2500	330.0	12.4	6.4	5.2	2.1	8.0	12.0	Q1

**PACKAGE MATERIALS INFORMATION** 

www.ti.com 29-Jul-2009



#### \*All dimensions are nominal

Device	Package Type	Package Drawing	Pins	SPQ	Length (mm)	Width (mm)	Height (mm)
THS4601IDDAR	SO PowerPAD	DDA	8	2500	346.0	346.0	29.0

## DDA (R-PDSO-G8)

## PowerPAD ™ PLASTIC SMALL-OUTLINE



NOTES: A. All linear dimensions are in millimeters. Dimensioning and tolerancing per ASME Y14.5-1994.

- B. This drawing is subject to change without notice.
- C. Body dimensions do not include mold flash or protrusion not to exceed 0,15.
- D. This package is designed to be soldered to a thermal pad on the board. Refer to Technical Brief, PowerPad Thermally Enhanced Package, Texas Instruments Literature No. SLMA002 for information regarding recommended board layout. This document is available at www.ti.com <a href="https://www.ti.com">http://www.ti.com</a>.
- E. See the additional figure in the Product Data Sheet for details regarding the exposed thermal pad features and dimensions.
- F. This package complies to JEDEC MS-012 variation BA

PowerPAD is a trademark of Texas Instruments.



## DDA (R-PDSO-G8)


## PowerPAD™ PLASTIC SMALL OUTLINE

#### THERMAL INFORMATION

This PowerPAD™ package incorporates an exposed thermal pad that is designed to be attached to a printed circuit board (PCB). The thermal pad must be soldered directly to the PCB. After soldering, the PCB can be used as a heatsink. In addition, through the use of thermal vias, the thermal pad can be attached directly to the appropriate copper plane shown in the electrical schematic for the device, or alternatively, can be attached to a special heatsink structure designed into the PCB. This design optimizes the heat transfer from the integrated circuit (IC).

For additional information on the PowerPAD package and how to take advantage of its heat dissipating abilities, refer to Technical Brief, PowerPAD Thermally Enhanced Package, Texas Instruments Literature No. SLMA002 and Application Brief, PowerPAD Made Easy, Texas Instruments Literature No. SLMA004. Both documents are available at www.ti.com.

The exposed thermal pad dimensions for this package are shown in the following illustration.

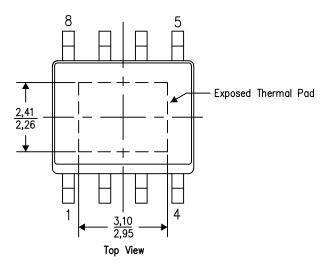

Exposed Thermal Pad Dimensions


4206322-4/L 05/12

NOTE: A. All linear dimensions are in millimeters



## DDA (R-PDSO-G8)

## PowerPAD™ PLASTIC SMALL OUTLINE

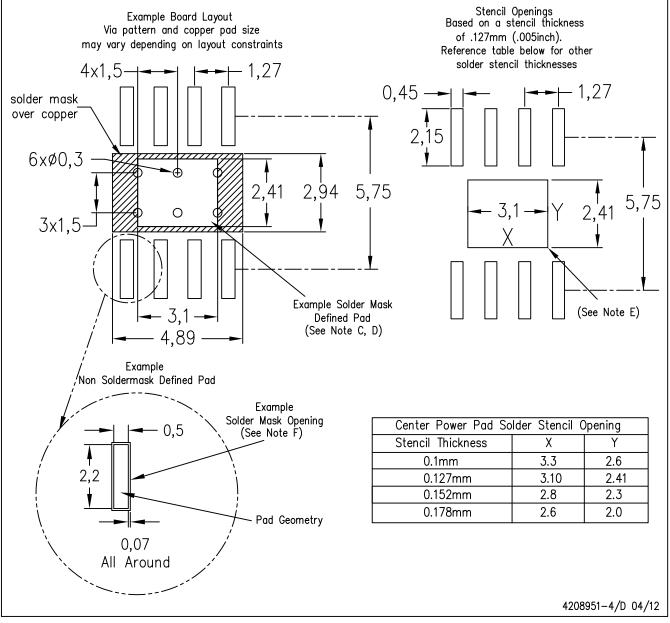

#### NOTES:

- A. All linear dimensions are in millimeters.
- B. This drawing is subject to change without notice.
- C. Customers should place a note on the circuit board fabrication drawing not to alter the center solder mask defined pad.
- D. This package is designed to be soldered to a thermal pad on the board. Refer to Technical Brief, PowerPad Thermally Enhanced Package, Texas Instruments Literature No. SLMA002, SLMA004, and also the Product Data Sheets for specific thermal information, via requirements, and recommended board layout. These documents are available at www.ti.com <a href="http://www.ti.com">http://www.ti.com</a>. Publication IPC-7351 is recommended for alternate designs.
- E. Laser cutting apertures with trapezoidal walls and also rounding corners will offer better paste release. Customers should contact their board assembly site for stencil design recommendations. Example stencil design based on a 50% volumetric metal load solder paste. Refer to IPC-7525 for other stencil recommendations.
- F. Customers should contact their board fabrication site for solder mask tolerances between and around signal pads.

PowerPAD is a trademark of Texas Instruments.



## D (R-PDSO-G8)

#### PLASTIC SMALL OUTLINE



NOTES:

- A. All linear dimensions are in inches (millimeters).
- B. This drawing is subject to change without notice.
- Body length does not include mold flash, protrusions, or gate burrs. Mold flash, protrusions, or gate burrs shall not exceed 0.006 (0,15) each side.
- Body width does not include interlead flash. Interlead flash shall not exceed 0.017 (0,43) each side.
- E. Reference JEDEC MS-012 variation AA.



## D (R-PDSO-G8)

## PLASTIC SMALL OUTLINE



NOTES:

- A. All linear dimensions are in millimeters.
- B. This drawing is subject to change without notice.
- C. Publication IPC-7351 is recommended for alternate designs.
- D. Laser cutting apertures with trapezoidal walls and also rounding corners will offer better paste release. Customers should contact their board assembly site for stencil design recommendations. Refer to IPC-7525 for other stencil recommendations.
- E. Customers should contact their board fabrication site for solder mask tolerances between and around signal pads.



#### **IMPORTANT NOTICE**

Texas Instruments Incorporated and its subsidiaries (TI) reserve the right to make corrections, modifications, enhancements, improvements, and other changes to its products and services at any time and to discontinue any product or service without notice. Customers should obtain the latest relevant information before placing orders and should verify that such information is current and complete. All products are sold subject to TI's terms and conditions of sale supplied at the time of order acknowledgment.

TI warrants performance of its hardware products to the specifications applicable at the time of sale in accordance with TI's standard warranty. Testing and other quality control techniques are used to the extent TI deems necessary to support this warranty. Except where mandated by government requirements, testing of all parameters of each product is not necessarily performed.

TI assumes no liability for applications assistance or customer product design. Customers are responsible for their products and applications using TI components. To minimize the risks associated with customer products and applications, customers should provide adequate design and operating safeguards.

TI does not warrant or represent that any license, either express or implied, is granted under any TI patent right, copyright, mask work right, or other TI intellectual property right relating to any combination, machine, or process in which TI products or services are used. Information published by TI regarding third-party products or services does not constitute a license from TI to use such products or services or a warranty or endorsement thereof. Use of such information may require a license from a third party under the patents or other intellectual property of the third party, or a license from TI under the patents or other intellectual property of TI.

Reproduction of TI information in TI data books or data sheets is permissible only if reproduction is without alteration and is accompanied by all associated warranties, conditions, limitations, and notices. Reproduction of this information with alteration is an unfair and deceptive business practice. TI is not responsible or liable for such altered documentation. Information of third parties may be subject to additional restrictions.

Resale of TI products or services with statements different from or beyond the parameters stated by TI for that product or service voids all express and any implied warranties for the associated TI product or service and is an unfair and deceptive business practice. TI is not responsible or liable for any such statements.

TI products are not authorized for use in safety-critical applications (such as life support) where a failure of the TI product would reasonably be expected to cause severe personal injury or death, unless officers of the parties have executed an agreement specifically governing such use. Buyers represent that they have all necessary expertise in the safety and regulatory ramifications of their applications, and acknowledge and agree that they are solely responsible for all legal, regulatory and safety-related requirements concerning their products and any use of TI products in such safety-critical applications, notwithstanding any applications-related information or support that may be provided by TI. Further, Buyers must fully indemnify TI and its representatives against any damages arising out of the use of TI products in such safety-critical applications.

TI products are neither designed nor intended for use in military/aerospace applications or environments unless the TI products are specifically designated by TI as military-grade or "enhanced plastic." Only products designated by TI as military-grade meet military specifications. Buyers acknowledge and agree that any such use of TI products which TI has not designated as military-grade is solely at the Buyer's risk, and that they are solely responsible for compliance with all legal and regulatory requirements in connection with such use.

**Applications** 

Automotive and Transportation www.ti.com/automotive

e2e.ti.com

TI products are neither designed nor intended for use in automotive applications or environments unless the specific TI products are designated by TI as compliant with ISO/TS 16949 requirements. Buyers acknowledge and agree that, if they use any non-designated products in automotive applications, TI will not be responsible for any failure to meet such requirements.

Following are URLs where you can obtain information on other Texas Instruments products and application solutions:

		•	
Amplifiers	amplifier.ti.com	Communications and Telecom	www.ti.com/communications
Data Converters	dataconverter.ti.com	Computers and Peripherals	www.ti.com/computers
DLP® Products	www.dlp.com	Consumer Electronics	www.ti.com/consumer-apps
DSP	dsp.ti.com	Energy and Lighting	www.ti.com/energy
Clocks and Timers	www.ti.com/clocks	Industrial	www.ti.com/industrial
Interface	interface.ti.com	Medical	www.ti.com/medical
Logic	logic.ti.com	Security	www.ti.com/security
Power Mgmt	power.ti.com	Space, Avionics and Defense	www.ti.com/space-avionics-defense
Microcontrollers	microcontroller.ti.com	Video and Imaging	www.ti.com/video

RFID <u>www.ti-rfid.com</u>
OMAP Mobile Processors www.ti.com/omap

**Products** 

Audio

Wireless Connectivity www.ti.com/wirelessconnectivity

www.ti.com/audio

TI E2E Community Home Page

Mailing Address: Texas Instruments, Post Office Box 655303, Dallas, Texas 75265 Copyright © 2012, Texas Instruments Incorporated